

VISION 120 ARGB VISION 120R ARGB

MANUAL

BELIEVE IT

www.Antec.com


All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted. Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

V2.2

©1986 – 2025 Antec Inc. All rights reserved.

1 CONTENTS


120MM FAN / 120MM REVERSE FAN

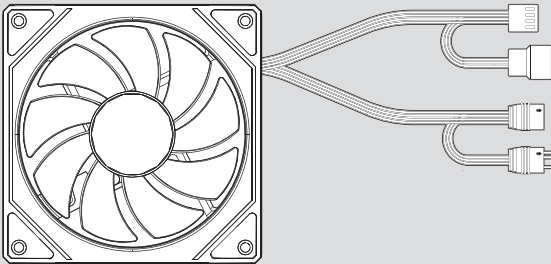


FAN SCREWS



 
LONG SCREWS (REVERSE FAN INCLUDED)



2 FAN INTRODUCTION

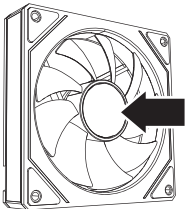


AIR-IN

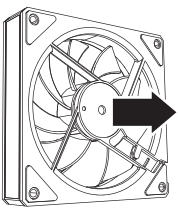


AIR-OUT

*Reverse Fan



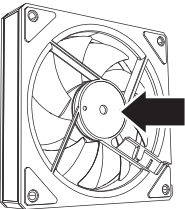


AIR-IN

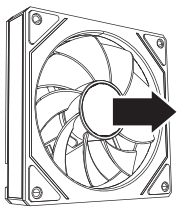


AIR-OUT

4 FAN INSTALLATION

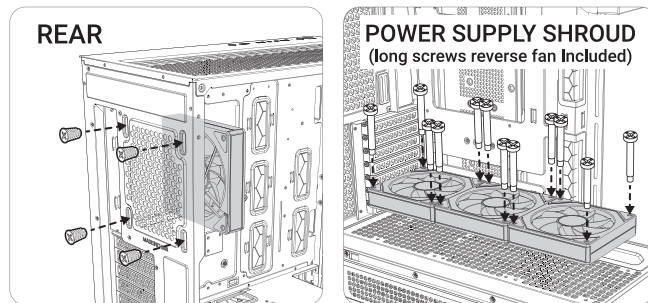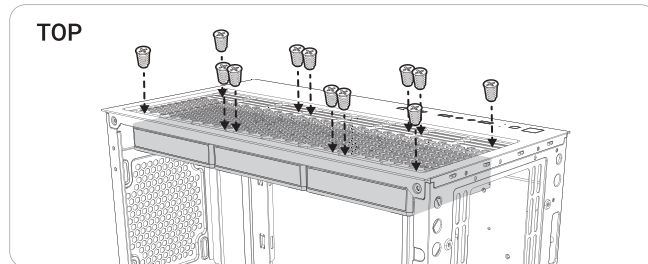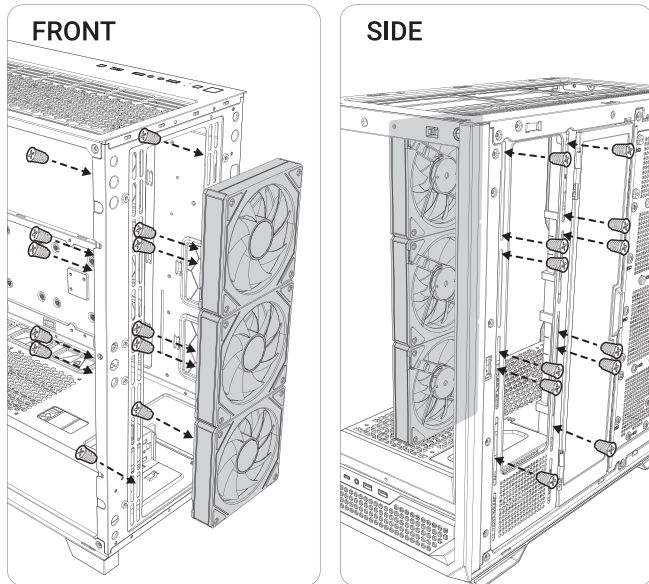


5 FAN CONNECTION

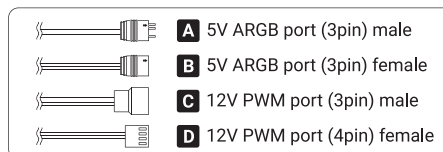

OPTION A :

- Connect the PWM 4-pin connector **D** to the fan 4-pin header of the motherboard.
- Connect the ARGB 3-pin connector **B** to the 3-pin ARGB header of the motherboard.

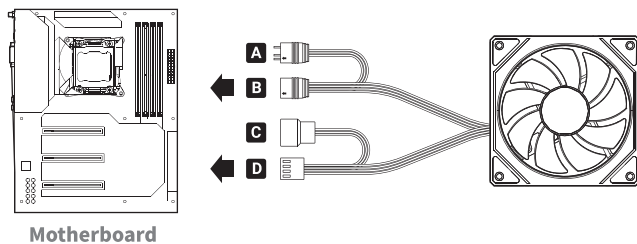

OPTION B :

- Daisy-chain the male and female connectors of the fan 3-pin ARGB interface.
- Daisy-chain the male and female connectors of the fan 3-pin & 4-pin PWM interface.
- Connect the 4-pin PWM and the 3-pin ARGB connector to the motherboard.

