


1

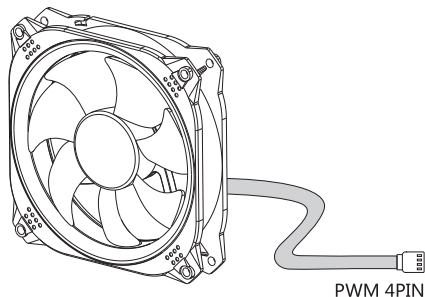


EN

Connect the controller with the PWM 4-pin cable or connect the PWM 4-pin cable to the motherboard

CN

连接控制器PWM 4pin接口或连接主板与主板同步

2

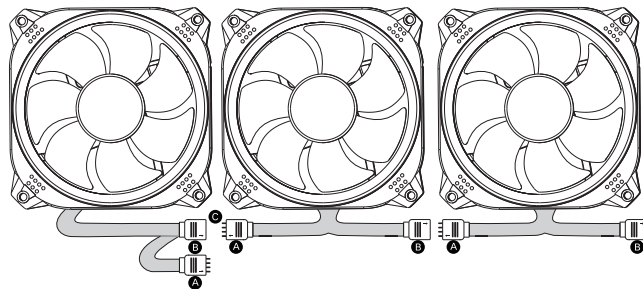

A

EN Connect to the FAN

CN 连接风扇

B

EN Connect to the integrated RGB hub or Motherboard sync

CN 连接控制板或连接主板

C

EN Plug the male to female 4pin connectors according to the arrows. Be sure that the arrows are facing each other, as shown in Section C

CN 连接时请确认对准接头标记



CHOOSE FROM TWO DIFFERENT TYPES OF RGB CONTROL TO SUIT YOUR NEEDS
A和B不可同时连接主板和控制器