

# HyperFlow RGB

 
## MANUAL

# Laptop Cooling Pad

### 1 CONTENTS

|                                  |      |
|----------------------------------|------|
| HyperFlow RGB Laptop Cooling Pad | 1PCS |
| Power Cable                      | 1PCS |
| Manual                           | 1PCS |


### 2 PRODUCT DETAIL

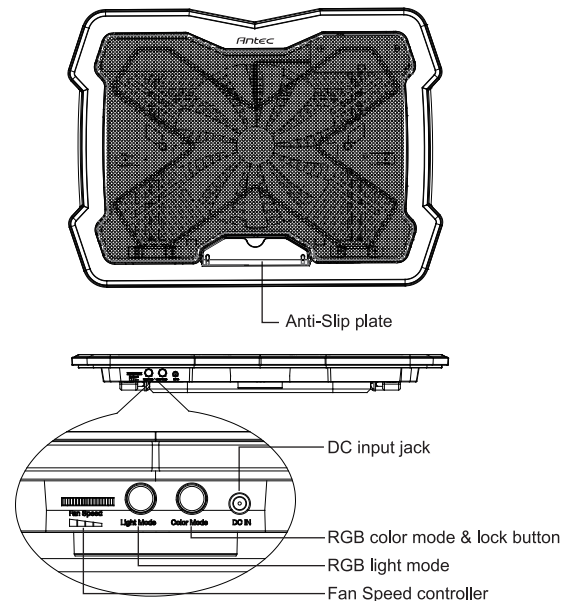


1

### 3 INSTALLATION

 1. Pick up cooling pad and related accessories.
2. Reversing anti-slip plate in front side ( If cooling pad is in flat, zero degree, then no need to reverse it).

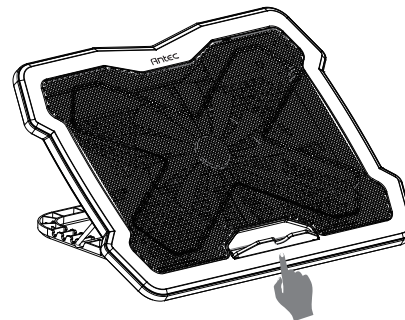

 
3. Adjusted the using angle ( there are 4 angles selection).

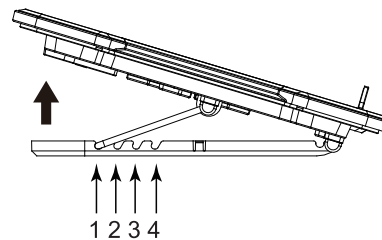

4. Put laptop on the cooling pad and then insert USB cable into laptop USB port, inserting DC connector into cooling pad. Power on from fan controller and adjust the RGB light mode.

2

 - a. This cooling pad has lighting memory function, it will keep the light mode status after shut down.
- b. Fan adjustment function, turn the fan controller from right side to left side, the power will be open and fan speed will be changed from the smaller to the biggest. Reversing it from left to right side until hear "clicking" then the power is off.

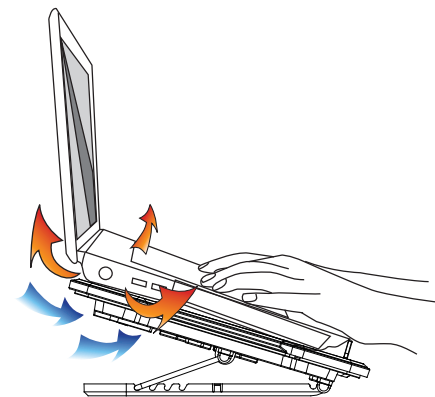

3

Antec®

BELIEVE IT

www.Antec.com

All rights reserved. Specifications are subject to change without prior notice. Actual products and accessories may differ from illustrations. Omissions and printing errors excepted, Content of delivery might differ in different countries or areas. Some trademarks may be claimed as the property of others.

V1.0

© 1986 - 2026 Antec Inc. All rights reserved.